




Free Downloads of Build Instructions,
Assembly Booklets & How To Guides

BuildInstructions.com

BATTLE TITAN LASER BLASTER

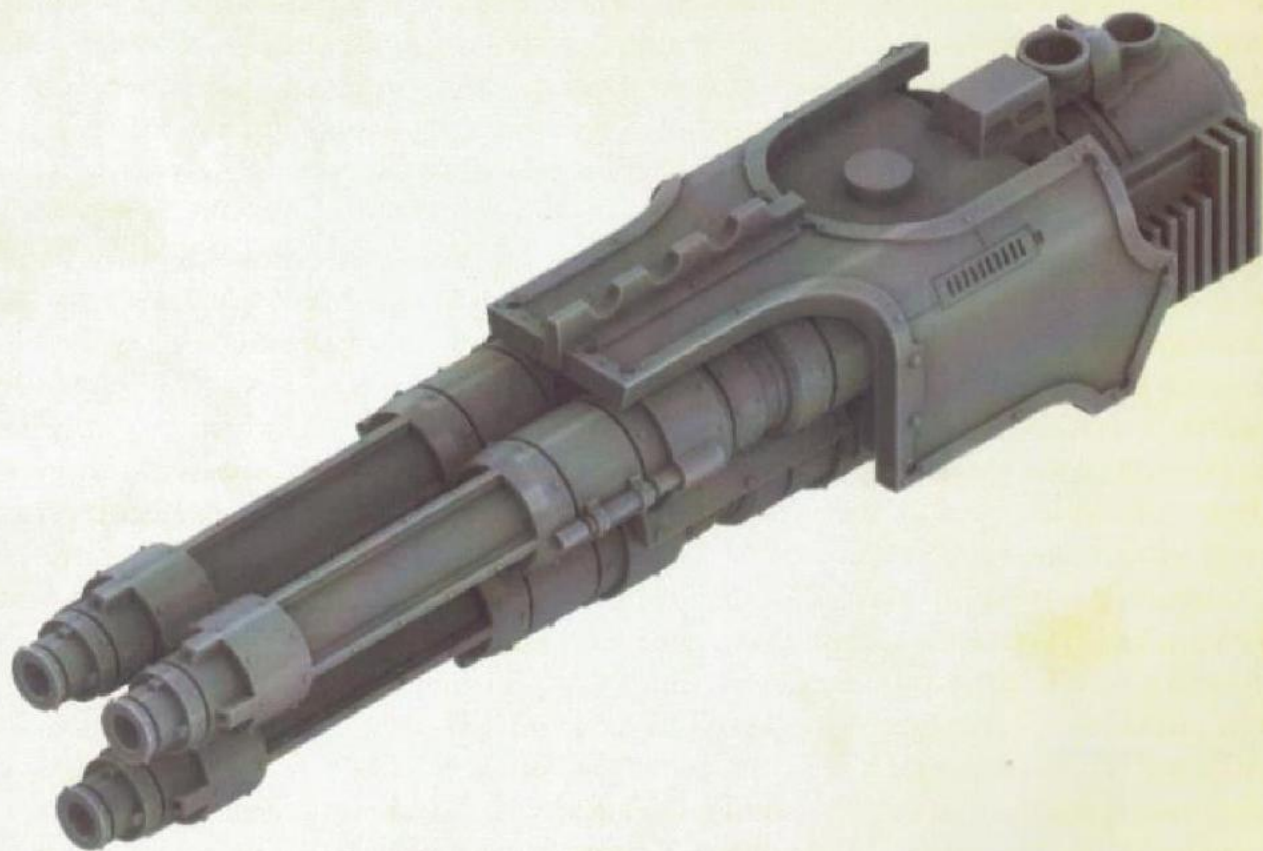

THIS IS NOT A TOY

Not suitable for children under 15 years of age.

WARNING: Resin dust can be harmful if inhaled. Always wear a dust mask or respirator when sanding or sawing resin parts.

**GAMES
WORKSHOP**

games-workshop.com

www.forgeworld.co.uk




993201080493

forge World

Components

Before assembly, check that none of the components are missing.

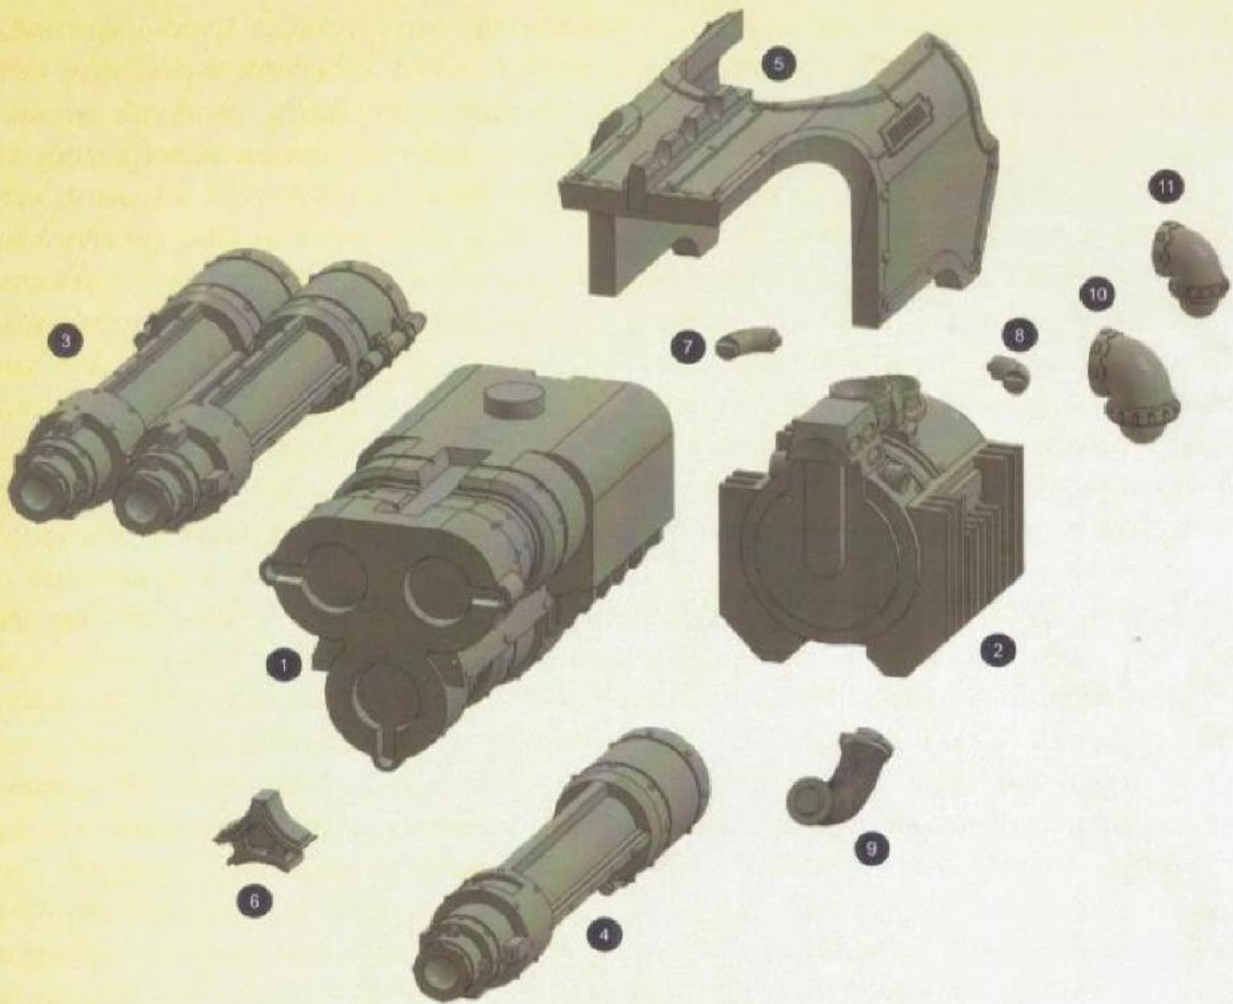

1. Focussing Chamber
2. Capacitor
3. Laser Blaster Double-barrel
4. Laser Blaster Barrel
5. Armour Plating
6. Barrel Brace

7. Right Coolant Pipe
8. Left Coolant Pipe
9. Cable
10. Reaver Titan Front Coupling
11. Reaver Titan Rear Coupling

Component Highlight



Do Not Glue



Insert



Parts for Assembly



Glue Contact Area



Note



If you need to contact the Forge World Customer Service team regarding this model, you can get in touch via email – forgeworld@gwplc.com – or call:


0115 900 4995 within the UK

011 44 115 900 4995 from the USA and Canada


0011 44 115 900 4995 from Australia

00 44 115 900 4995 from Europe and the rest of the world.


I

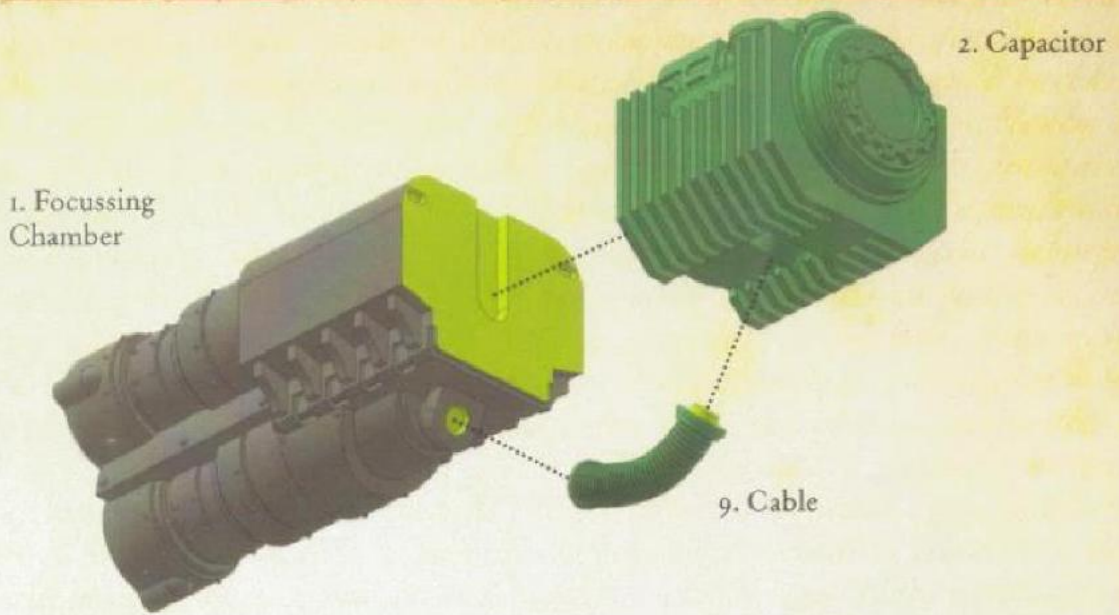

2

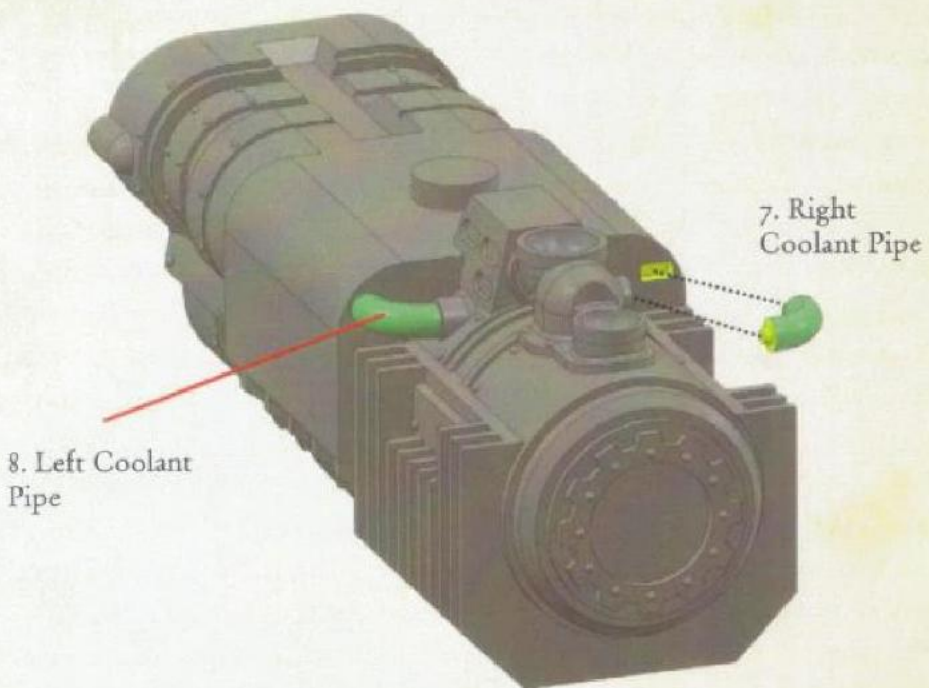


3

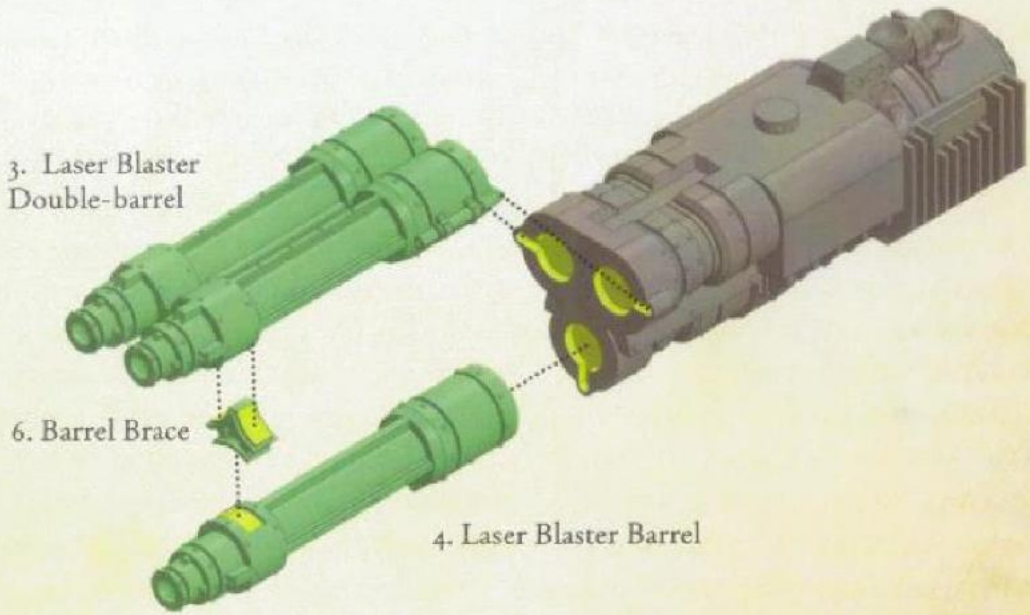

4

5. Armour
Plating

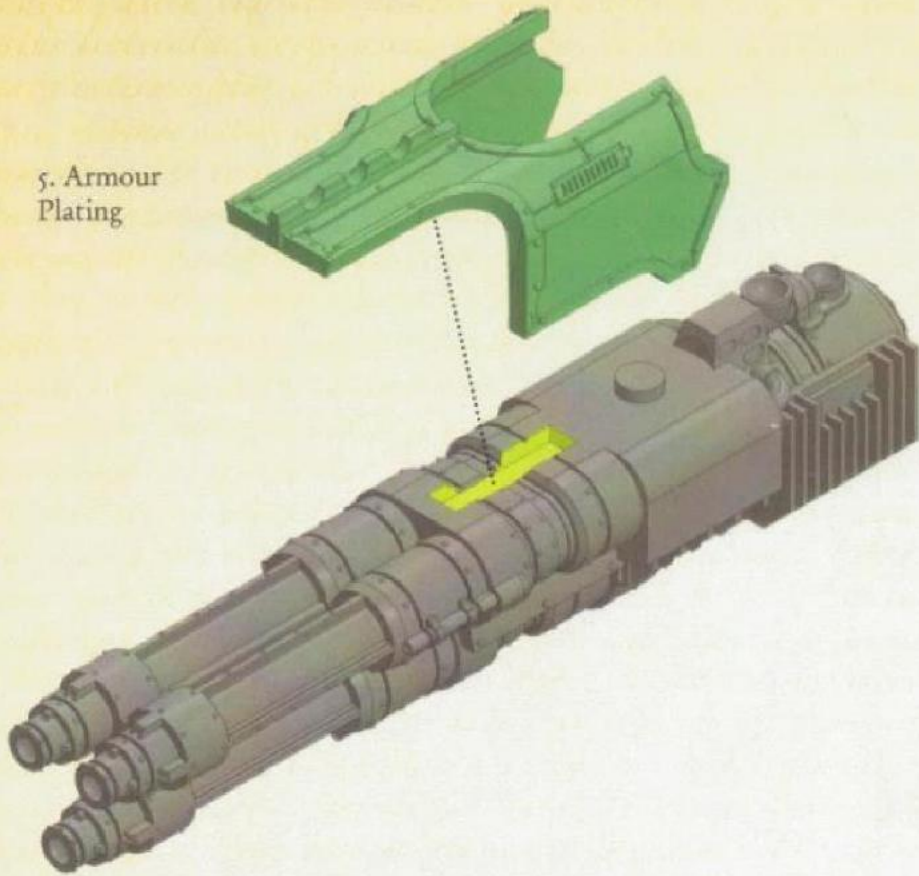

5



Stage 5 is only used for the Mars
Pattern Reaver Titan or the
Chaos Reaver Titan. The example
below shows a fitting for the left
hand side.

10. Reaver Titan
Front Coupling

11. Reaver Titan
Rear Coupling

