


Free Downloads of Build Instructions, Assembly Booklets & How To Guides

BuildInstructions.com



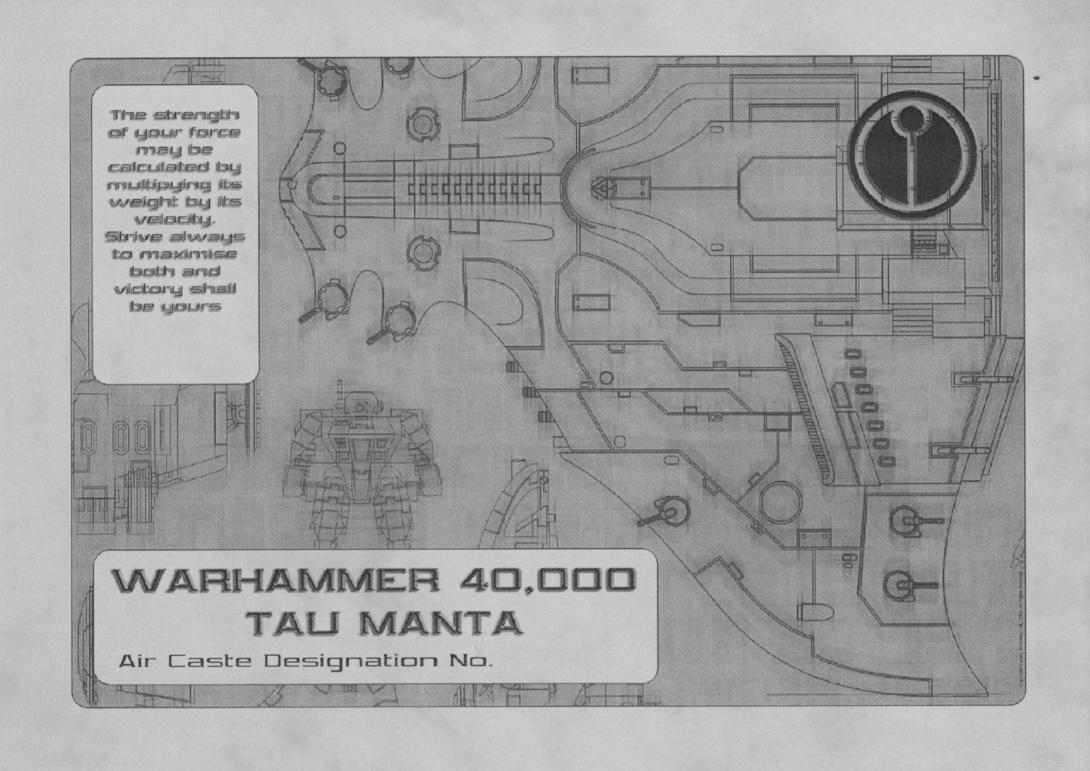


TAU MANTA

The Manta is a large and complicated kit, we recommend checking the components list to ensure all parts are present. Certain components should be painted before or during assembly as access to them may be limited once the model is completed. Before assembling or painting the kit all parts should be cleaned and washed and all gates and flash should be trimmed from the components We also recommend a high quality super glue for assembly and following an order of assembly as follows:

PLASTIC COMPONENTS LIST

- 1. Battlesuit Sprues (x8)
- 2. Gun Drone Sprues (x10)
- 3. 2x Hammerhead Sprue sets
- 4. 2x Devilfish Sprue sets

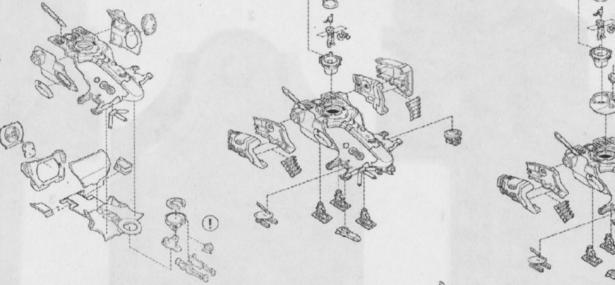

This kit contains all the pieces required to produce the Manta

To glue the resin pieces together use Citadel Super Glue.


NOTE: We have cast this kit using the most advanced techniques and the best quality resin, but due to the nature of the casting process your model may contain very slight air bubbles. These can easily be filled with model filler or super glue. Any slight warpage of thin parts can easily be corrected by immersing the part in hot tap water for about 1 minute then carefully bending it back into shape.

THIS IS NOT A TOY

Not suitable for children under 15 years of age.


WARNING: Resin dust can be harmful if inhaled. Always wear a dust mask or respirator when sanding or sawing resin parts.

Product code: IA-TAU-F-005

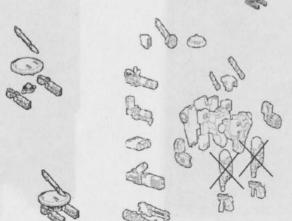

SHEET 1 OF 23


MAIN FUSELAGE

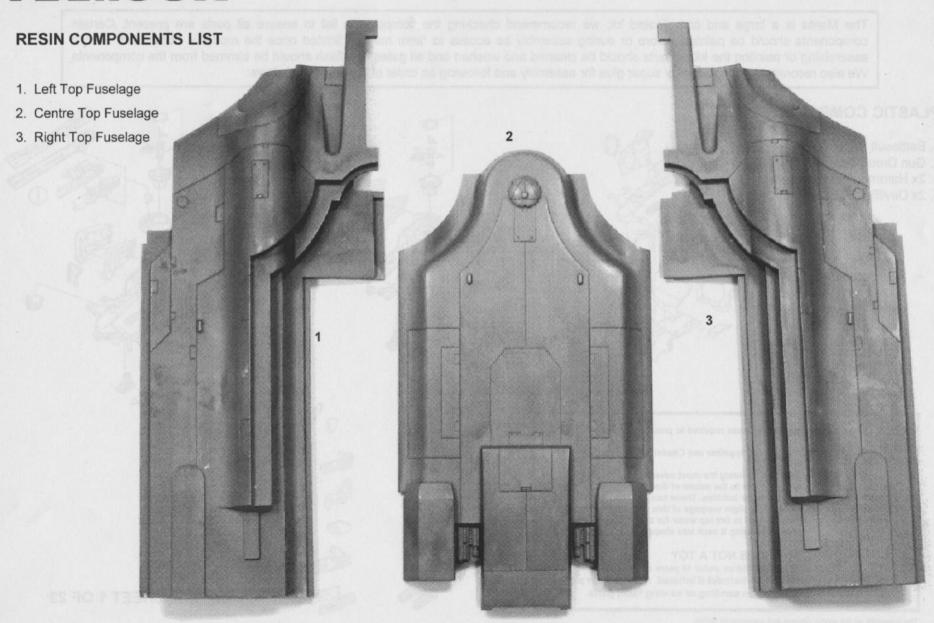



WINGS AND ENGINES


- 4. Left Wing
- 5. Right Wing
- 6. Left Heavy Railgun Housing
- 7. Right Heavy Railgun Housing
- 8. Left Engine
- 9. Right Engine
- 10. Left Engine Cowl
- 11. Right Engine Cowl
- 12. Left Main Exhaust
- 13. Right Main Exhaust
- 14. Left Secondary Exhaust
- 15. Right Secondary Exhaust

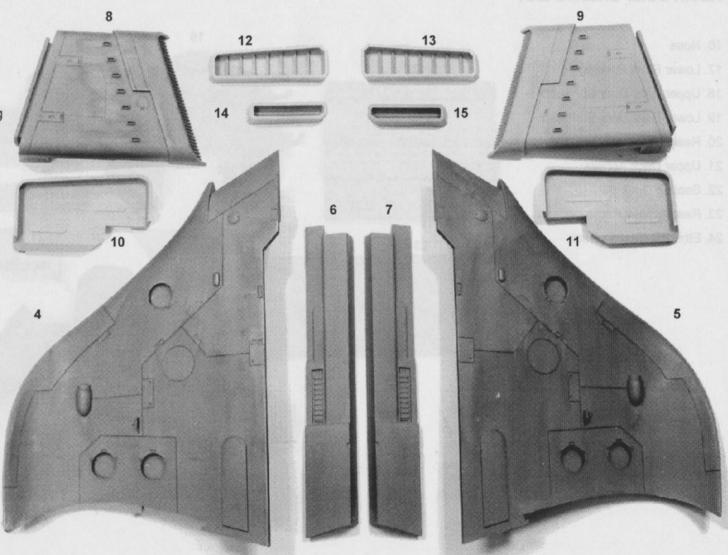



NOSE AND UPPER TRANSPORT


- 16. Nose
- 17. Lower Front Fuselage
- 18. Upper Rear Door Surround
- 19. Lower Rear Door Surround
- 20. Rear Deck
- 21. Upper Deck Access
- 22. Seating Deck
- 23. Rear Access Ramp
- 24. Ethereal Seating Deck

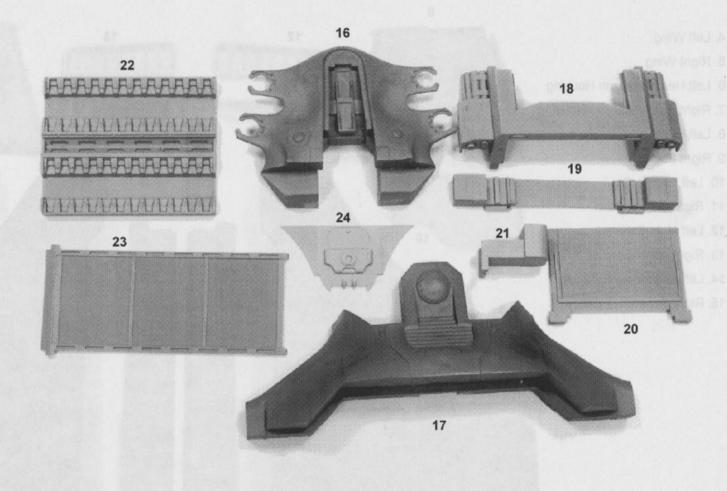




TANK BAY

- 25. Tank Bay
- 26. Tank Bay Door
- 27. Tank Bay Runners (x2)
- 28. Tank Bay Hinge Mounts (x2)
- 29. Tank Bay Access Lift
- 30. Hinges (x4)
- 31. Hinge Pins (x4)

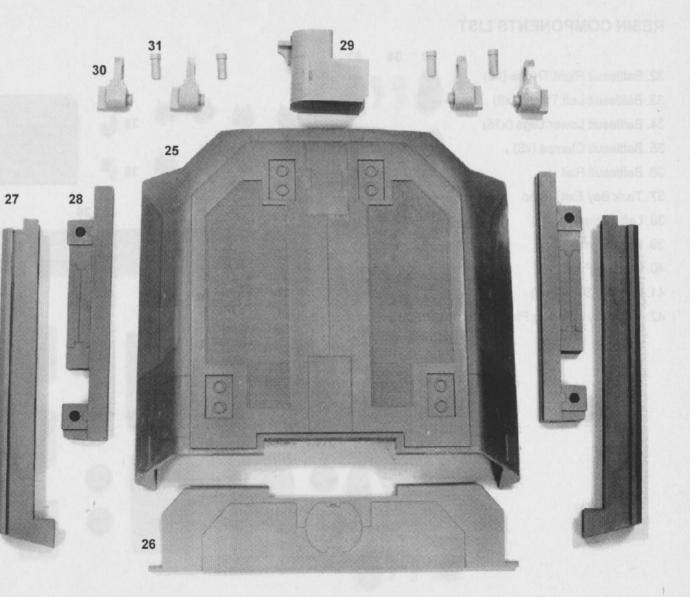

TANK BAY INTERIOR


- 32. Battlesuit Right Thighs (x8)
- 33. Battlesuit Left Thighs (x8)
- 34. Battlesuit Lower Legs (x16)
- 35. Battlesuit Clamps (x8)
- 36. Battlesuit Rail
- 37. Tank Bay Exit Ramp
- 38. Left Ramp Hinge
- 39. Right Ramp Hinge
- 40. Landing Feet (x4)
- 41. Landing Struts (x8)
- 42. Tank Bay Blanking Plates (x12)

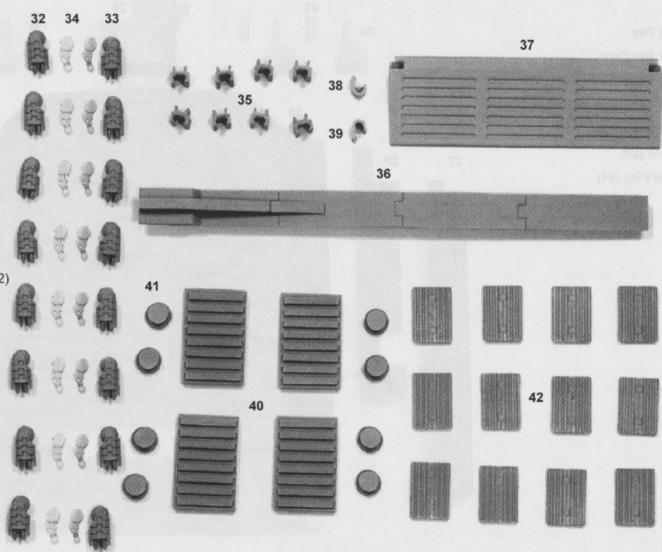



COCKPIT AND EXTERIOR DETAILS

- 43. Antennas Mounts (x4)
- 44. Antennas (x4)
- 45. Rear Ramp Cover
- 46. Underside Domes (x2)
- 47. Cockpit
- 48. Control Centre Cover
- 49. Markerlight Mount
- 50. Markerlight Turret
- 51. Left Cockpit Door
- 52. Right Cockpit Door
- 53. Rear Troop Door 1
- 54. Rear Troop Door 2

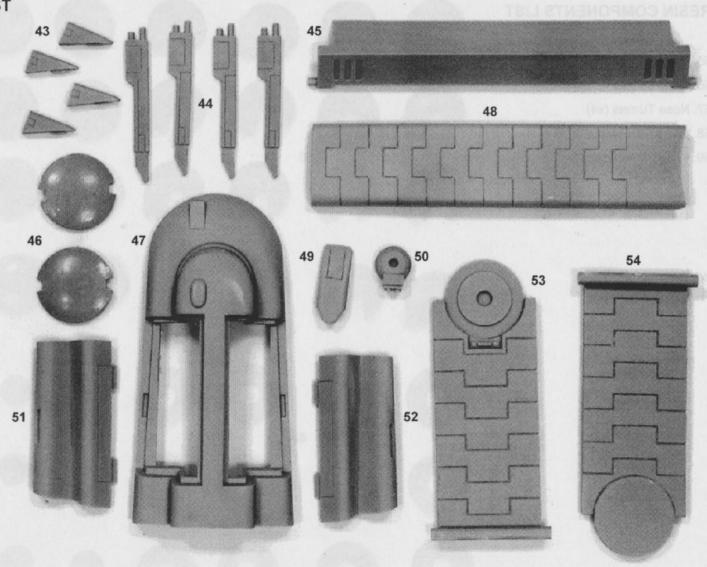




BURST CANNON TURRETS

RESIN COMPONENTS LIST

- 55. Burst Cannon Pod (x16)
- 56. Wing Turrets (x12)
- 57. Nose Turrets (x4)
- 58. Wing Turret Mounts (x12)
- 59. Wing Turret Locks (x12)

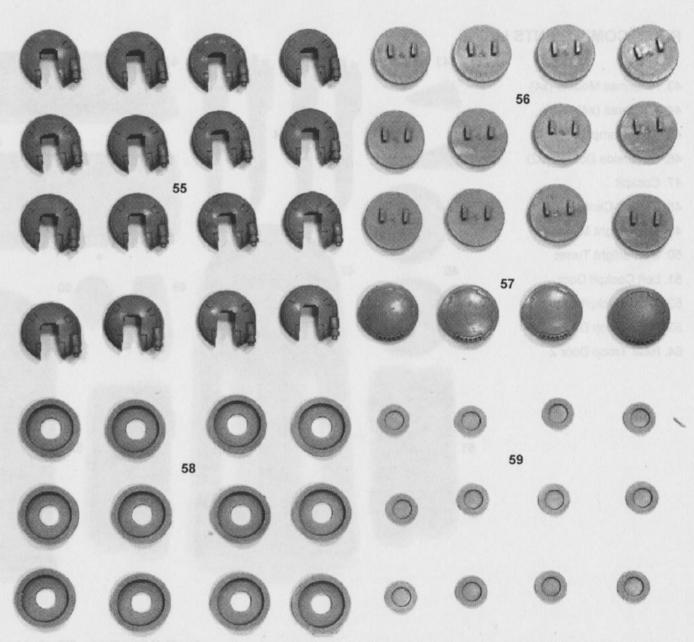

TAU MANTA Product code: IA-TAU-F-00


SHEET 8of23

Forge World, Games Workshop, Willow Road, Lenton, Nottingham, NG7 2WS, UK. Tel. 0044 (0)115 916 8177




WEAPONS

- 60. Ion Cannons (x6)
- 61. Burst Cannons (x16)
- 62. Burst Cannon Barrels (x16)
- 63. Heavy Railgun Halves (x4)

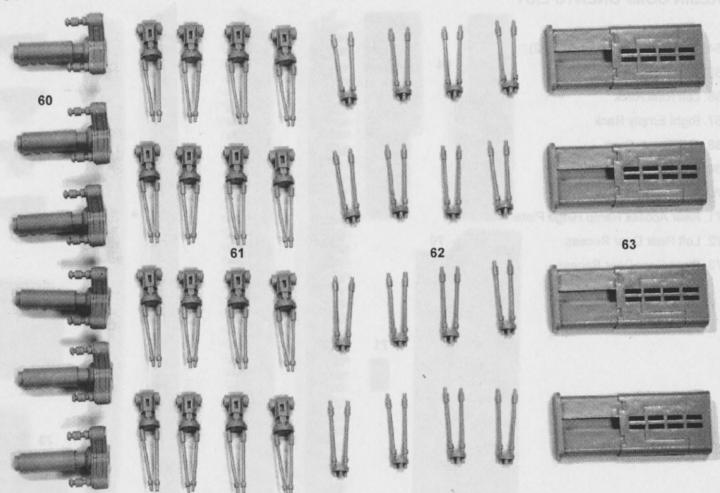

WINGS AND ENGINES


- 64. Tank Bay Door Supports (x2)
- 65. Right Rifle Rack
- 66. Left Rifle Rack
- 67. Right Empty Rack
- 68. Left Empty Rack
- 69. Drone Mounts (x12)
- 70. Rear Access Ramp Foot
- 71. Rear Access Ramp Hinge Plate
- 72. Left Rear Door Recess
- 73. Right Rear Door Recess

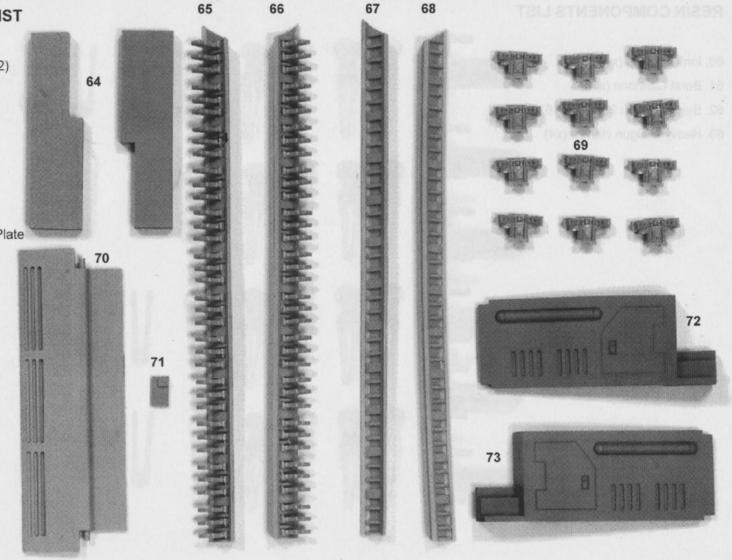


RESIN COMPONENTS LIST

- 74. Ethereal Chair
- 75. Pilot Seats (x2)
- 76. Crew Seats (x4)
- 77. Ethereal
- 78. Pilots (x2)
- 79. Crew 1 (x2)
- 80. Crew 2 (x2)
- 81. Right Consoles (x2)
- 82. Left Consoles (x2)
- 83. Crew Left Arms 1 (x2)
- 84. Crew Left Arms 2 (x2)
- 85. Crew Right Arms 1 (x2)
- 86. Crew Right Arms 2 (x2)
- 87. Lift Console
- 88. Fire Warriors (x48)


PERSONNEL

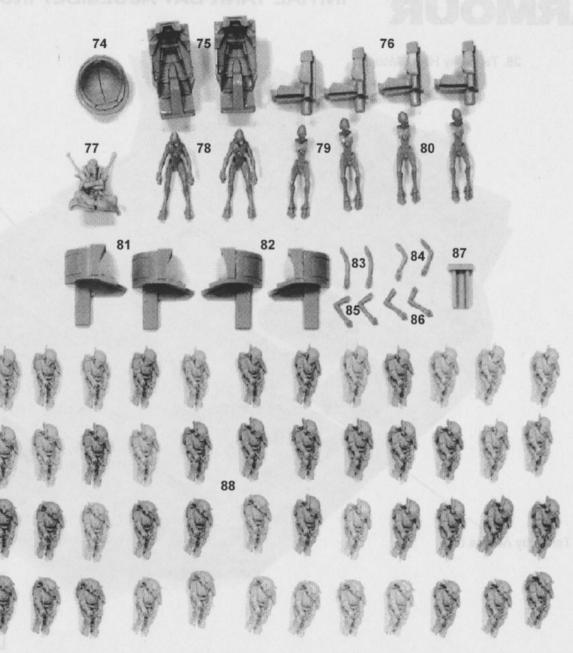


INITIAL TANK BAY ASSEMBLY INSTRUCTIONS

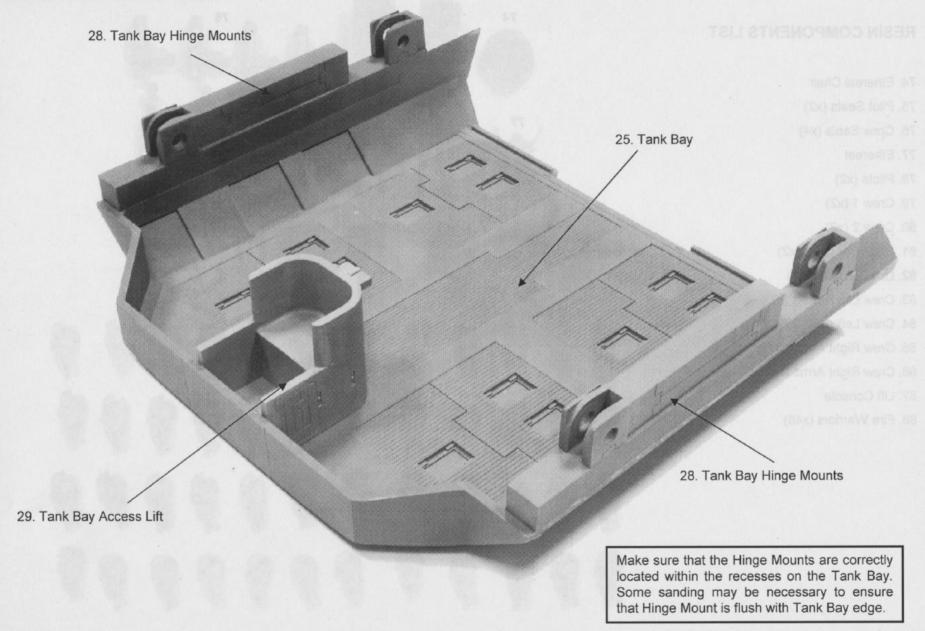


COMMAND CENTRE ASSEMBLY INSTRUCTIONS

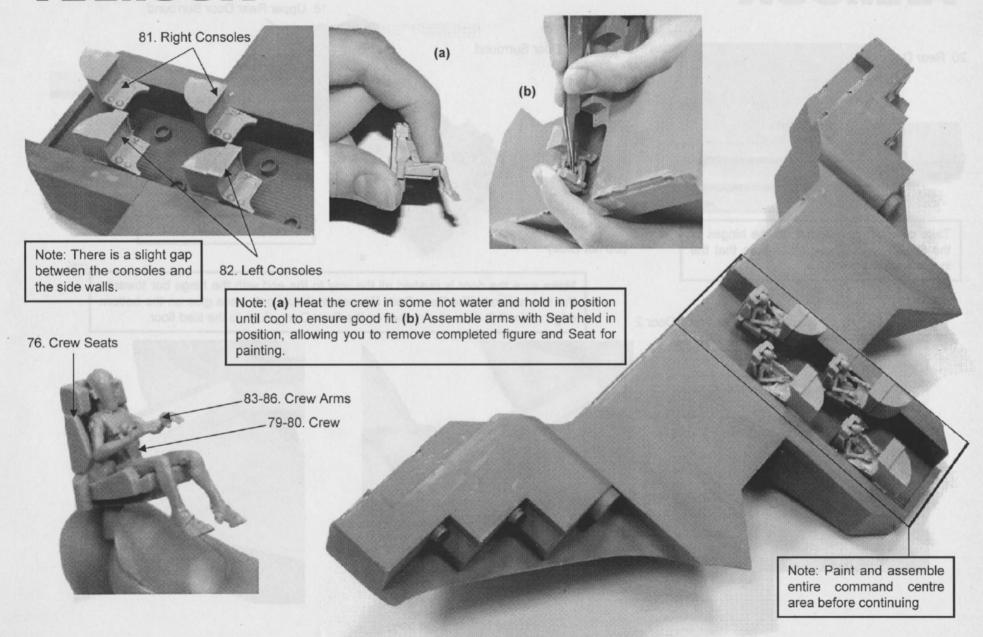


REAR DOOR ASSEMBLY INSTRUCTIONS

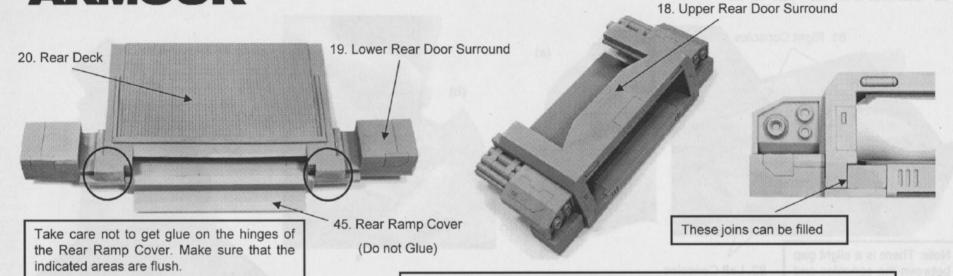


54. Rear Troop Door 2

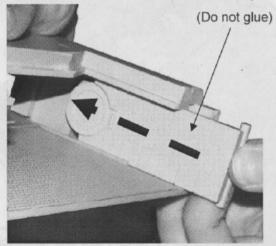


 Make sure the door is pushed all the way to the end with the hinge bar towards the internal wall. The Rear Door Recesses should only have glue on the bottom edge and will fit down the runner on the Rear Deck, flush to the tiled floor.

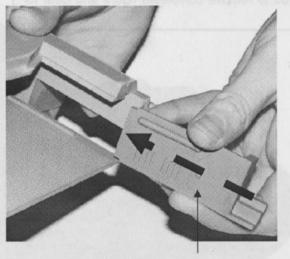




(Glue bottom edge only)

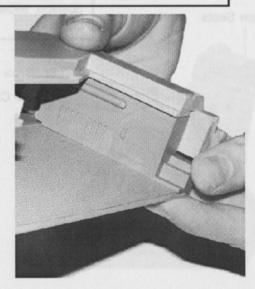




FUSELAGE ASSEMBLY INSTRUCTIONS

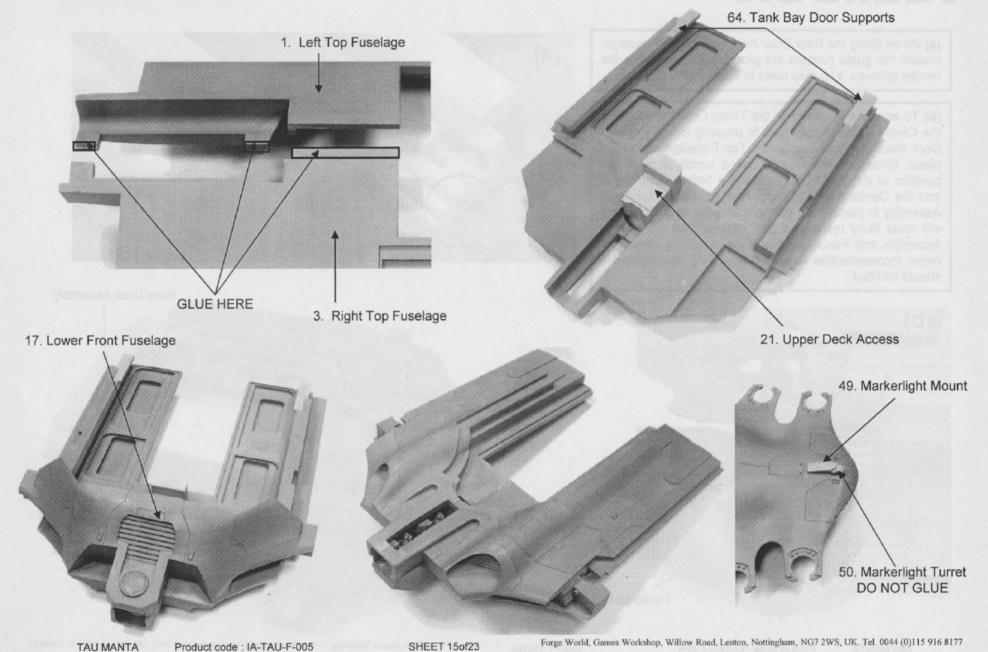



FUSELAGE ASSEMBLY INSTRUCTIONS

(a) When fitting the Rear Door Assembly to the Fuselage, ensure the guide runners are properly located within the recess grooves. You may need to apply a little pressure.

(b) To ensure the interior of the Troop Compartment and the Centre Top Fuselage will fit properly locate the rear Door Assembly with the Centre Top Fuselage already in place. Once properly located use a pencil to mark the position of the Rear Door Assembly before removing it and the Centre Top Fuselage. Now glue the Rear Door Assembly in place using the pencil marks as guides. This will most likely result in a gap between the Rear Door Assembly and Fuselage, this is normal as it allows for minor inconsistencies in shrinkage during casting and it should be filled.

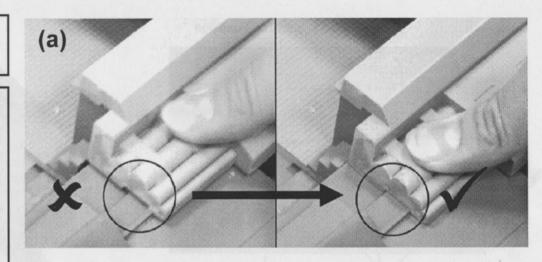


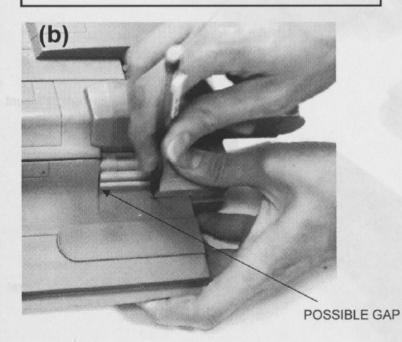

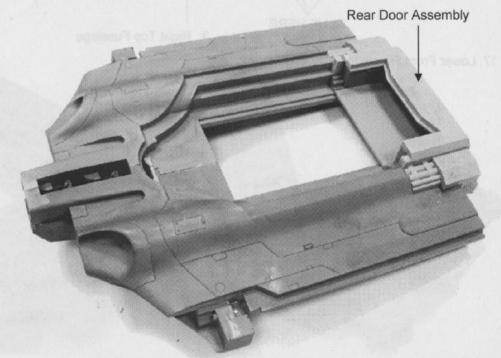

SHEET 16of23


WING ASSEMBLY INSTRUCTIONS

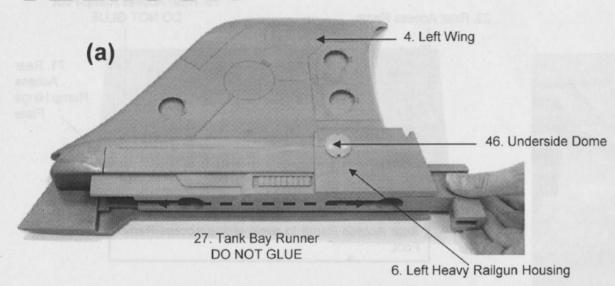


(a) Ensure that the Tank Bay Runner will slide freely within the channel created once the Heavy Railgun Housing is attached to the Wing.

(b) Place Fuselage Assembly on Tank Bay Assembly (DO NOT GLUE) before attaching wings. Attach Wing Assembly to Fuselage Assembly, taking care to avoid gluing to the Tank Bay Assembly, immediately followed by the Engine. Ensure the Engine is accurately located on its guides as this is crucial for the integrity of the join between Wing and Fuselage.

Also take care to align the rear of the Engine to the rear of the Wing as failure to do so could result obstructing fitment of Engine Cowls.

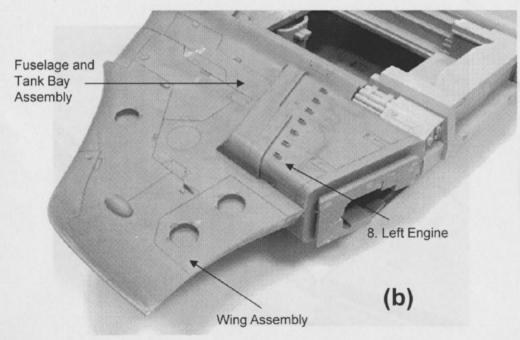

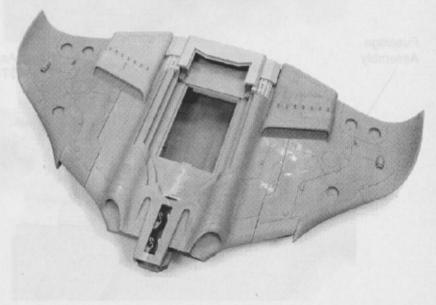

TAU MANTA

Product code: IA-TAU-F-005


SHEET 17of23


Forge World, Games Workshop, Willow Road, Lenton, Nottingham, NG7 2WS, UK. Tel. 0044 (0)115 916 8177


IMPERIAL ARMOUR


NOSE AND RAMP INSTALLATION

Foot.

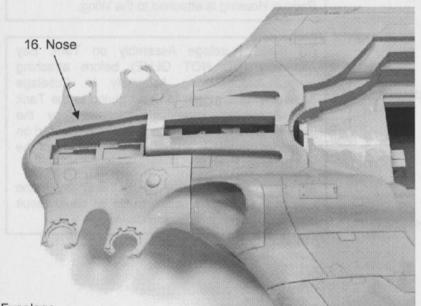

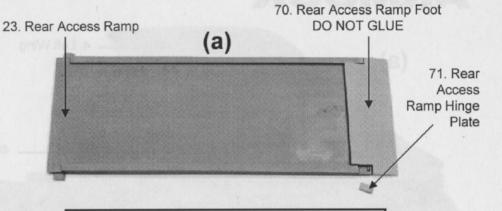


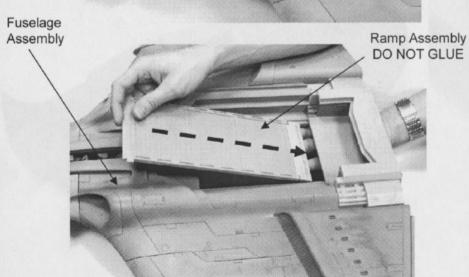


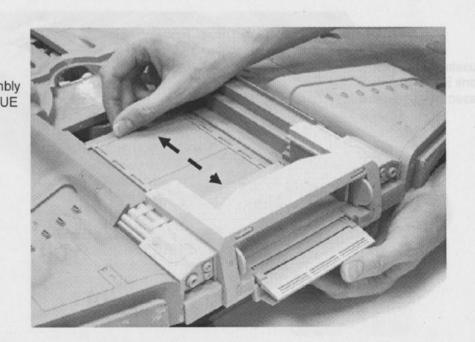


(a) Take care when attaching Hinge Plate to the Rear Access Ramp to avoid gluing Access Ramp

UPPER DECK AND COCKPIT INSTALLATION

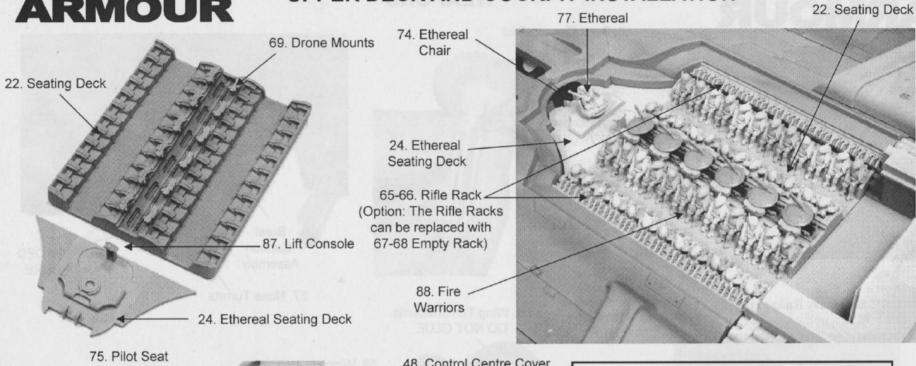


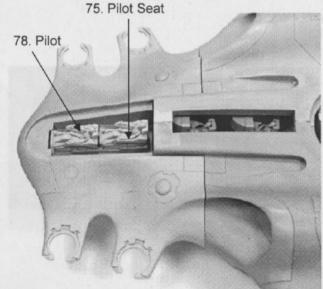


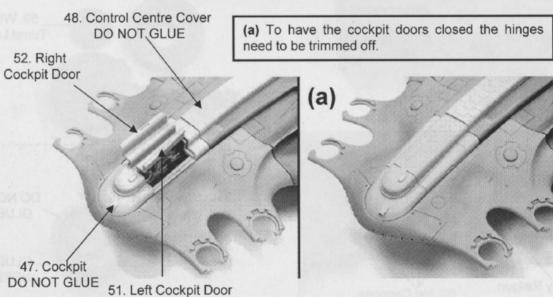

62. Burst — Cannon Barrels 61. Burst Cannons

63. Heavy Railgun Halves

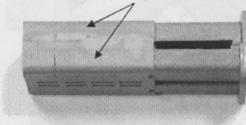


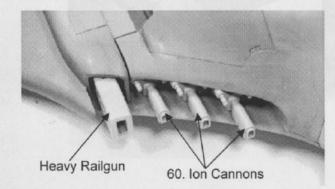



TAU MANTA


Product code: IA-TAU-F-005

 WEAPONS

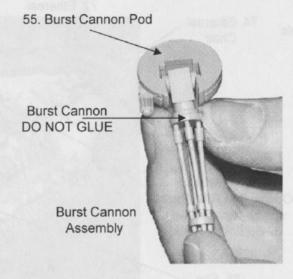

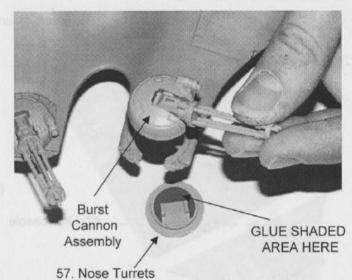




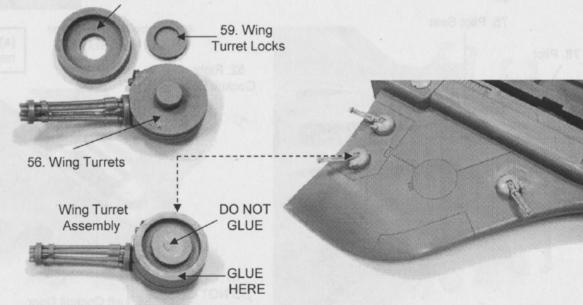

SHEET 20of23

Forge World, Games Workshop, Willow Road, Lenton, Nottingham, NG7 2WS, UK. Tel. 0044 (0)115 916 8177

LANDING FEET AND ENGINES

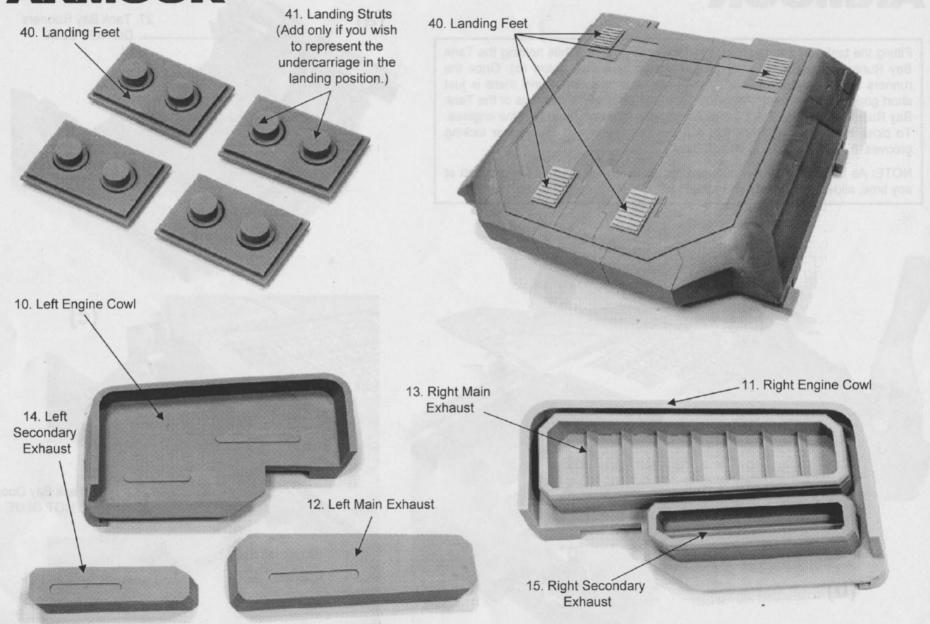






TANK BAY INSERTION

Fitting the tank bay into the Manta requires two people. While holding the Tank Bay Runners in place (a) offer up the Manta, as shown below (b). Once the runners are located in the rear of the engines slide them in until there is just short gap as shown in (c). Place the Tank Bay Door within the slots of the Tank Bay Runners and slide them the remaining distance until flush with the engines. To close the Tank Bay Door fold it under the Manta and lift to clear locking grooves. It should then drop into grooves.

NOTE: As the Tank Bay Runners are not glued in the bay may be removed at any time, allowing access to you tanks.

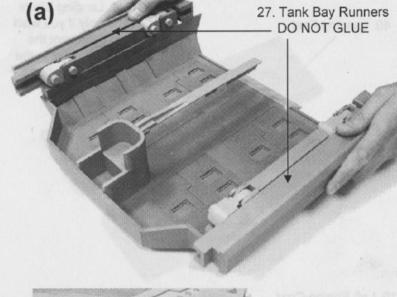

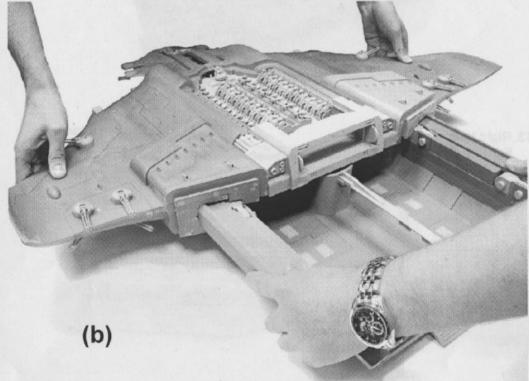

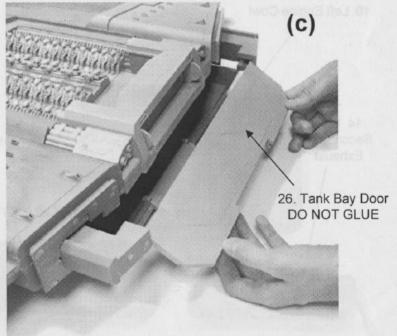

TAU MANTA


Product code: IA-TAU-F-005


SHEET 22of23

Forge World, Games Workshop, Willow Road, Lenton, Nottingham, NG7 2WS, UK. Tel. 0044 (0)115 916 8177



ENGINE AND ANTENNAS FITMENT

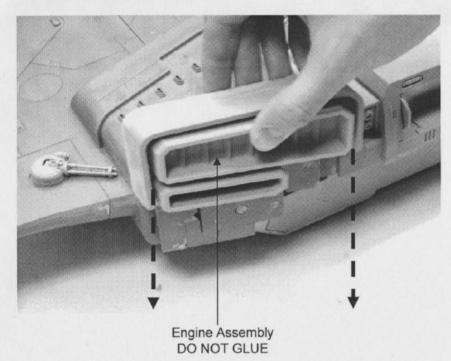

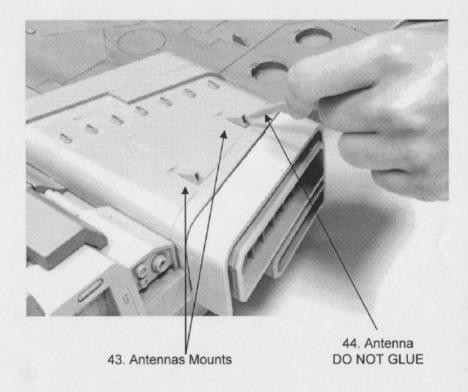

Dropping The Bay

Open the Tank Bay Door and leave it hanging loose. Slide the Mata forwards as far as it will go to unlock the Bay hinges. Lift the Manta, holding the Bay against the ground (You may need some assistance). It should move upwards and rearwards to lock into the open position. The Tank Bay Door then can slide into the roofline to stay open.