



Free Downloads of Build Instructions,
Assembly Booklets & How To Guides

BuildInstructions.com

KX139 TA'UNAR SUPREMECY ARMOUR PULSE ORDNANCE MULTI-DRIVER

A recent development of Tau pulse technology, this triple-barrelled weapons battery uses powerful induction fields to propel a variety of heavy munitions with great force and precision. Fired in rapid volleys, this mix of high explosive and kinetic projectiles can either be used to fire concentrated bombardments to saturate a single target or in arcing trajectories to shower a wider area to equally devastating effect.



THIS IS NOT A TOY

Not suitable for children under 15 years of age.

WARNING: Resin dust can be harmful if inhaled. Always wear a dust mask or respirator when sanding or sawing resin parts.


forgeworld.co.uk



WARHAMMER
40,000

Components

Before assembly, check that none of the components are missing.

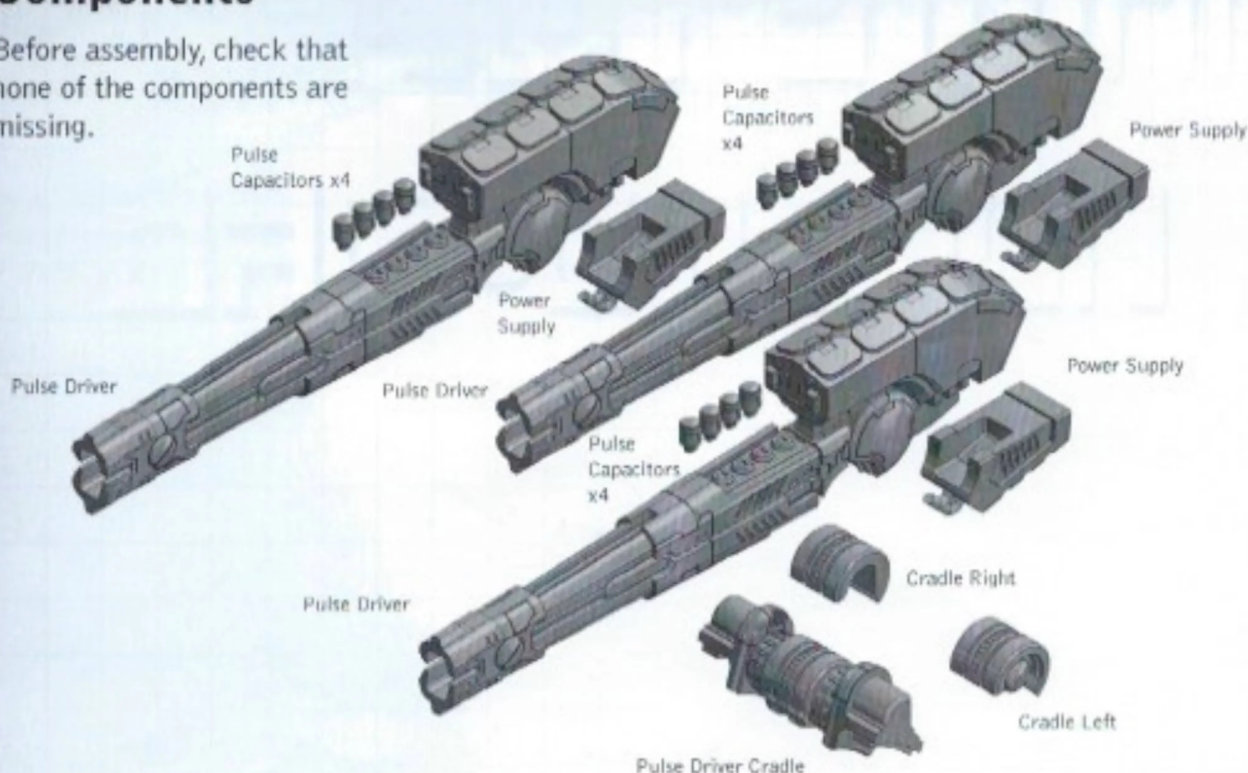

Assembly Legend

Parts for Assembly



Note



Insert



Assembly Options



Glue Contact Area



Preparing the Model for Assembly

Before assembling the model, wash each part thoroughly with an abrasive brush, such as a toothbrush, to remove any model release agent that may still be on the surface of the parts. Then, remove any excess resin such as mould lines, casting gates, vents and shims. For a more detailed guide to working with resin models, go to the Downloads section of the Forge World website.

This kit contains all the pieces required to construct a Pulse Ordnance Multi-driver.

To glue the resin pieces together, use Citadel Super Glue.

NOTE: We have cast this kit using advanced techniques and high quality resin, but due to the nature of the casting process, your model may contain small air bubbles. These can easily be filled with model filler or super glue. Any slight warpage of thin parts can easily be corrected by immersing the part in hot tap water for about 1 minute, then carefully bending it back into shape.

If you need to contact the Forge World Customer Service team regarding this model, you can get in touch via email - forgeworld@gwplc.com - or call:


0115 900 4995 within the UK

011 44 115 900 4995 from the USA and Canada

0011 44 115 900 4995 from Australia

011 44 115 900 4995 from Europe and the rest of the world.

1

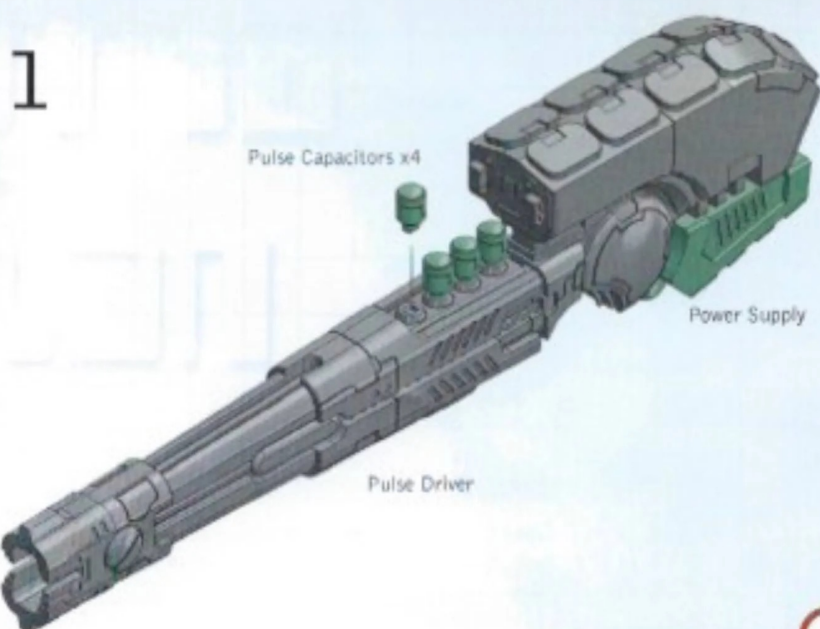

1a



Use a pair of clippers to remove any vents and casting gates. The Working with Resin guide on the Forge World website goes into more detail about cleaning up resin components.




Complete step 1 for all three of the Pulse Drivers.

2



2a

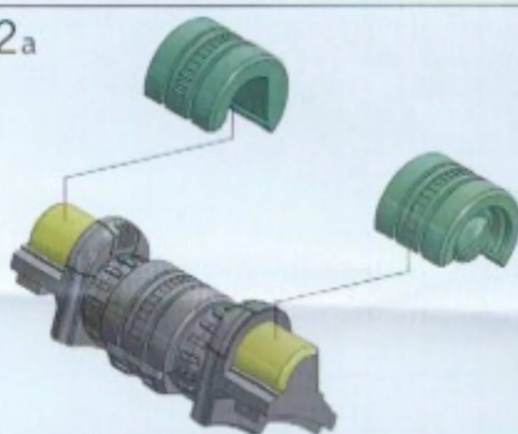

3




Before mounting the Cradle and Pulse Drivers, decide how you want them to be mounted onto the KX139 Ta'unar Supremecy Armour.

3a




Pulse Ordnance Multi-drivers set for direct fire mode.

3b

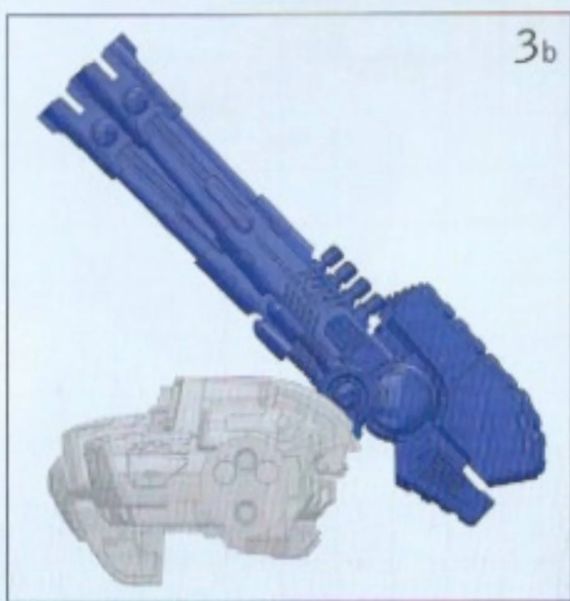


Pulse Ordnance Multi-drivers set for indirect fire mode.

4

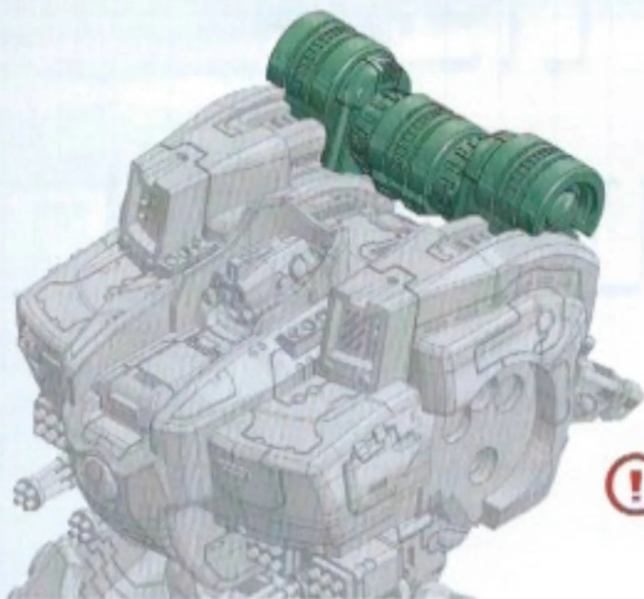


4a

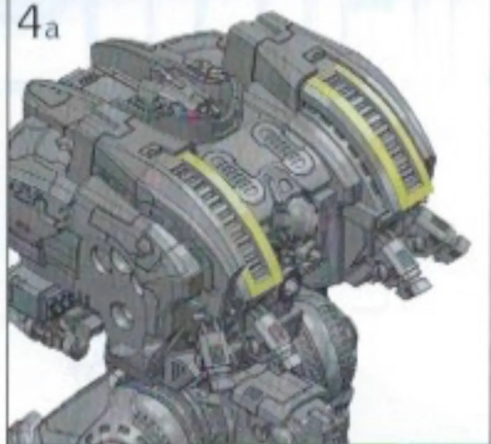

The cradle contacts the areas shown above. Only apply glue to the part of the highlighted section that you want to pose the cradle on.

5

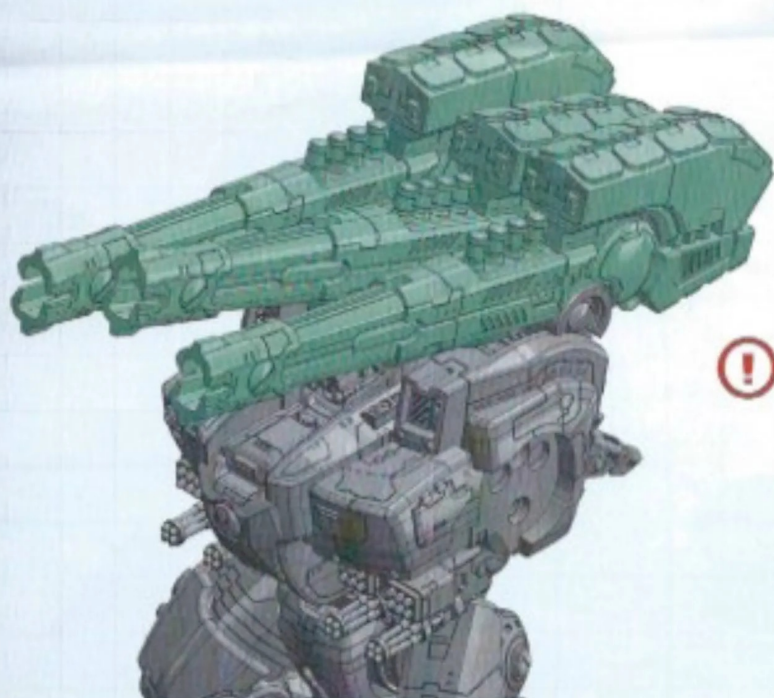

5a



The Pulse Ordnance Drivers are mounted onto the cradle using the contact points shown above. With the cradle already in position on the KX139 Ta'unar Supremacy Armour, it is easier to judge where you would like each Pulse Driver to go.